


ALPKIT

03/12/17

Product recall - Brukit Jackal and Brukit Wolf burner unit

1 INTRODUCTION:

The screw threads on the valves of a small number of Brukit Wolf and Brukit Jackal burners have been manufactured outside of specified tolerances. Fig 1. The screw threads on the affected burners will not form a correct seal on the gas canister. Gas can escape from these valves rendering the burner unsafe and should be returned.

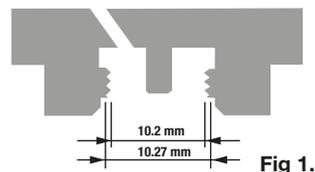

Which stoves are affected?

Brukit Jackal - Received or purchased instore or online between 27/03/17 and 14/11/17

Brukit Wolf - Received or purchased instore or online between 28/04/17 and 14/11/17

If you have been using your Brukit regularly, issue free and following the instructions (page 2&3), then it is unlikely that you will need to return your burner unit. You can expect many more years of trouble free operation.

If you have not yet used your stove or after following the instructions notice gas escaping from the threaded valve please return your burner so that we can exchange it for you.



2 SAFETY ADVICE:

- 1) Before attaching the burner to the gas canister, always check the rubber o-ring is in place, in good condition and the valve is in the off position.
- 2) Do not over-tighten. Over-tightening your gas canister can permanently seal the gas canister valve.
- 3) Use only outdoors - never use indoors or in a poorly ventilated space such as a tent vestibule.
- 4) Do not use your stove if it is leaking, damaged, missing parts or does not operate properly.

IF YOU HEAR OR SMELL LEAKING GAS WHEN THE GAS BURNER IS ATTACHED:

- 1) **DO NOT LIGHT** not attempt to light the stove.
- 2) **DO NOT USE A FLAME** to detect leaks.

Note: It is normal to hear a small amount of gas escape from the canister as you are attaching and detaching it.

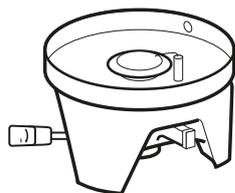


Fig 2.
THE BURNER UNIT
You do not need to return the complete stove.

3 PLEASE RETURN THE BURNER TO US IF:

- 1) You hear gas escape when a gas canister is fully attached and the valve is closed.
- 2) The valve connection does not seem secure and the burner appears crooked or at an angle when attached to the canister.
- 3) You are still unsure whether your stove is safe.

HOW TO RETURN YOUR FAULTY BURNER UNIT

Please print off and follow the instructions in the returns form on page 4. It is especially important that you tell us who you are and what your order number is!

PLEASE WRITE BRUKIT ON THE OUTSIDE OF THE PACKAGE TO HELP US PROCESS YOUR RETURN AS EFFICIENTLY AS POSSIBLE.

Do not return the complete stove, we only need the burner unit. (Fig 2).

Faulty items will be exchanged and returned free of charge.

INTERNATIONAL CUSTOMERS

If you have a faulty stove please contact us for returns information.

4 For further advice please contact customer support: Email: support@alpkit.com, Phone: 01773 417007 or visit us in our Ambleside or Hathersage stores Note: The original Brukit 900 ml with a black neoprene pot cosy is not affected by this safety notice.



ALPKIT

Alpkit is a limited company registered in England and Wales 5146091 | VAT No. 842 6987 83 | alpkit.com | support@alpkit.com


IMPORTANT SAFETY INFORMATION: READ BEFORE USE

CHECK THE O-RING

Before attaching the gas canister, always check the rubber o-ring is in place and in good condition. If the o-ring is damaged, worn or missing it may not provide an appropriate seal.

Spares are available from Alpkit.

CHECK O-RING IS IN PLACE BEFORE USE

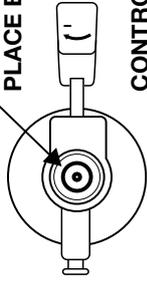

CONTROL VALVE

IF YOU SMELL LEAKING GAS

1. Do not attempt to light the stove
2. Extinguish any open flames
3. Disconnect from the fuel supply
4. Remove the stove to a well-ventilated, flame-free location where the leak may be detected and stopped
5. Do not use a flame to detect leaks, use soapy water

OPERATIONAL WARNINGS

1. Do not use this stove if it has worn, damaged or missing seals
2. Parts may become very hot in use, keep away from children, it is not a toy
3. Brukit must be operated on a horizontal surface, at least 1m away from any combustible materials
4. Do not move, lift or tilt Brukit while the burner is lit as flaring may occur
5. Do not use this stove if it is leaking, damaged, missing parts or does not operate properly
6. Do not leave Brukit unattended while in use
7. Always change fuel canisters in a well ventilated location, away from any sources of ignition, such as open flames, electric fires, and away from other people

TROUBLESHOOTING

IMPORTANT: Do not modify this appliance, it must only be serviced by an authorised person. If an issue can't be corrected using these instructions, contact Alpkit for parts and/or service

1. O-ring: If the o-ring is damaged or cracked, contact Alpkit
2. Piezo igniter fails to spark: If igniter will not spark, pull igniter wire towards of burner holes. If igniter still fails to spark, use matches or a lighter. Contact Alpkit for service

SPECIFICATIONS

Gas category : Butane under vapour pressure

Use only with 100g/230g/450g Butane-Propane gas cartridges (sold separately).

Canister must conform to the EN417 or AS2278 standard. It may be hazardous to attempt to fit other type of gas containers.

Jet size: 0.22 mm
Power: 1000 W

Alpkit Ltd, Unit 12-14 Oak House, Moorgreen Ind Est, Newthorpe, NG16 3QU. +44 (0)1773 417007, www.alpkit.com, support@alpkit.com

Warranty - We design, manufacture and source the best outdoor gear and sell direct to you. If one of our products doesn't meet your expectations upon delivery or, if it does not live up to the demands placed upon it, please return it within three years of purchase for repair, replacement or refund. If a problem is our fault then we will do this to your satisfaction if it's your fault then we will help out the best we can. Normal wear and tear, misuse, alteration or abuse are not covered.



I have read and understood these safety instructions.

Signed:


Date:

Thank you for purchasing the Alpkit Brukit cooking system. Please read this manual to ensure the safe and long term use of this stove. Note, there may be a slight tarnish on or around the burning head due to burn testing before shipment. This is normal and ensures you have a perfectly working stove.

IMPORTANT

Do not use this stove until you have read, understood and complied with all the instructions and warnings contained within this manual.

Keep these instructions safe for future reference.

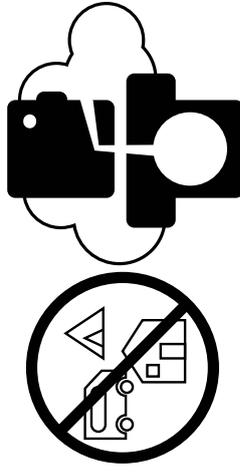

WARNING USE OUTDOORS ONLY

CARBON MONOXIDE HAZARD


1. This appliance can produce carbon monoxide which has no odour
2. Never use this appliance in an enclosed space such as a camper van, tent, vehicle, or home
3. Using it in an enclosed space can kill you

Failure to comply with these instructions can result in fire, burns, severe injury or death.

OPERATION AND INSTRUCTIONS FOR USE: ONLY USE OUTDOORS

ABOUT YOUR STOVE

Your Brukit is stored in its own pot making it compact and convenient to carry. Note the pot has internal volume measurements, one of which is a MAX line to help prevent over-boiling. The base of the pot has a heat exchanger with slots to secure it to the burner. Familiarise yourself with how the pot attaches to the burner. Hold the burner securely and align the retaining knobs with the slots on the pot and twist the pot clockwise to secure. Try it a couple of times until you are comfortable. Remember - only use the pot provided to avoid overheating. Twiddle the control valve, clockwise to close and anti-clockwise to open. Turn upside down and take a close look at the valve. There is a small rubber o-ring in it - this is important, the stove should never be used if this is missing or damaged. The small button on the burner is the Piezo igniter. Click it and you will see a blue spark over the burner - don't touch it; you will get a shock. No doubt you have noticed the neoprene cosy wrapped around the pot, this makes handling the pot easier when hot and helps keep your food warm. You can remove this for cleaning. You are now ready to go, feeling hungry yet?

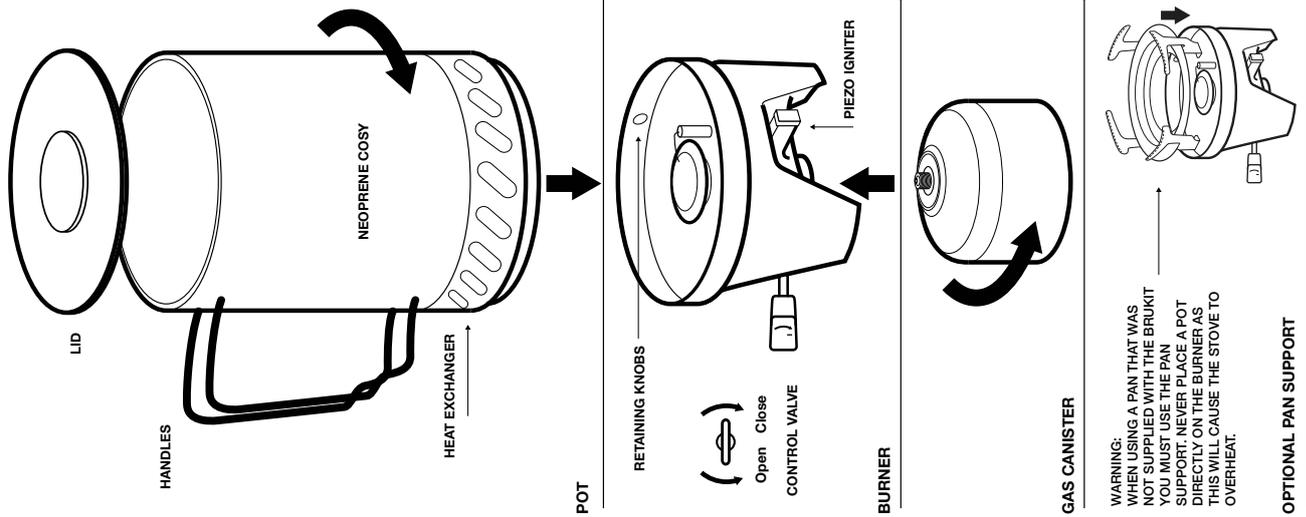

WARNING:
WHEN USING A PAN THAT WAS NOT SUPPLIED WITH THE BRUKIT YOU MUST USE THE PAN SUPPORT. NEVER PLACE A POT DIRECTLY ON THE BURNER AS THIS WILL CAUSE THE STOVE TO OVERHEAT.

OPTIONAL PAN SUPPORT

cooking pot on the burner and turn clockwise to lock in place. Do not heat empty; add liquid or liquid food to the cooking pot immediately. Use on a low heat to prevent over-boiling and save fuel.

Optional pot support: We recommend you only use the Brukit pot provided, however if you need to use this stove with a different pot you must use the pot support to adapt your Brukit. Failure to do so will result in the stove overheating. **NEVER PLACE A TRADITIONAL POT OR PAN DIRECTLY ON THE BURNER.**


Turning off: Turn the control valve clockwise to extinguish the flame. Allow to cool, exposed metal parts may be hot. Hold the pot by the neoprene cosy and detach from the burner base. Always check the burner is extinguished before disconnecting the fuel canister. Unscrew the fuel canister from the burner base.

Cleaning: Do not use a dishwasher or abrasive compounds as they will damage the pot. Remove the neoprene cosy and wash by hand in soapy water. The handles can also be removed.

CHECK THE O-RING

Before attaching the gas canister, always check the rubber o-ring is in place and in good condition. If the o-ring is damaged, worn or missing it may not provide an appropriate seal.

CHECK O-RING IS IN PLACE BEFORE USE

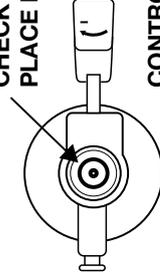


CONTROL VALVE

DO NOT OVERTIGHTEN

Over-tightening your gas canister to your Brukit will cause a weak flame and will eventually permanently seal the gas canister valve. The screw thread valve should have a raised, protruding top as indicated below.

A valve damaged by over-tightening will be-

come depressed and appear hollow.

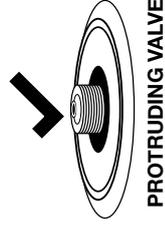

PROTRUDING VALVE

DEPRESSED VALVE

STORAGE

Always disconnect the stove from the canister before storing.

After use inspect and clean the stove. Moisture, dust or debris may cause clogging or rust during storage.

Place burner assembly in bottom of cooking pot, put fuel cartridge upright on top of overturned burner base and replace lid.

Store your stove in the protective bag it was supplied with to prevent damage.

Store fuel canisters in well ventilated spaces away from any heat or ignition sources.

Always store fuel canisters in temperatures below 40°C.

Keep stored canisters away from children.

SERVICE & REPAIRS

Always ensure that the o-ring is in place and in good condition.

Replace the o-ring if it is damaged or worn, they are available from Alpkit.

If you cannot rectify any fault by following these instructions return the stove to Alpkit.

Never attempt repair or perform maintenance beyond what is described in these instructions.

Never modify the stove in any way as this may cause it to become unsafe.

If you find this stove to be defective, contact Alpkit immediately: support@alpkit.com

RETURNS FORM

Unwanted goods can be returned within 123 days of purchase for refund or exchange. They must be unused, in saleable condition, free from any damage and include all original components and packaging. If you believe your goods to be faulty, please contact us before returning them. **INCLUDE THIS FORM** when returning your product.

Order number

AK * * * * *

or Date / Place of Purchase

Find this on your email confirmation

YOUR ADDRESS

Name:

Address:

Postcode:

Tel/Mob:

Email:

Billing address if
different to above:

Postcode:



THE ALPINE BOND

DESIGNED TO PERFORM AND TO LAST

If one of our products does not meet your expectations upon delivery or, if during its lifetime it does not live up to the demands placed upon it, please return it to us for repair, replacement or refund. alpkit.com/support



FREE UK 123 DAY RETURNS

If something's not quite right, we'll exchange or refund your purchase. If returned items are not clean, missing parts, damaged or you fail to provide proof of purchase / order reference details your return may be delayed or refused.

For larger items such as bouldering mats and Dozers please contact us. alpkit.com/returns

INTERNATIONAL RETURNS

To exchange your unwanted product please place a new order online and then return your unwanted product for refund.

alpkit.com/international

RETURNED PRODUCT

REQUESTED ACTION

Name/Colour/Size

BRUKIT

Refund

Exchange

Repair

WHAT'S UP ? / ACTION

Bigger than expected

Smaller than expected

No longer needed

← SPILL THE BEANS

Faulty

Damaged on arrival

Other

AND FINALLY, VISIT [HTTP://RM.ALPKIT.COM](http://RM.ALPKIT.COM) TO GENERATE A RETURNS LABEL

Alpkit, Units 12 - 14 Oak House, Moorgreen Industrial Park, Engine Lane, Newthorpe, Nottingham, NG16 3QU, UK
Important: We advise you to ask for a certificate of posting.

Full returns information can be found online at: www.alpkit.com/returns