

ALPKIT SOLOIST



Go Nice Places, Do Good Things.

Introducing your new Soloist tent. A one person 3 season backpacking tent weighing 1.2kg, freestanding, stable and light with oodles of room for your kit.

IMPORTANT:


Thank you for purchasing the Alpkit Soloist. Please curtail your excitement and do not use this product until you have read, understood, and complied with all the instructions and warnings contained within this manual.

WARNING


- This tent is NOT fireproof and will burn in seconds if exposed to flame or excessive heat.
- Do not cook in your tent.
- Do not place hot appliances close to the walls or roof of your tent, observe safety warnings for any appliances and do not allow children to play near them.
- Keep exits of tent free from obstructions and woodland creatures, they will steal your food.
- Maintain adequate ventilation at all times, death by suffocation is possible. Always store any cheesy socks in vestibules or outside tent.
- Anchor your tent carefully at all times: the use of tent pegs is recommended, anchors are very heavy.
- Choose your campsite wisely, be aware of the possibility of falling rocks and trees, lightning, flash floods, avalanches and airborne whales.

PITCHING INSTRUCTIONS

1. Soloist can be pitched inner or outer first. The easiest and most effective method is inner pitch first. If you have a footprint now is the time to peg it out. Ensure the ground is free from sharp objects and rocks. In windy conditions it is best to pitch Soloist inline with the wind.
2. Lay out the inner to line up with the footprint and peg out the four corners until a suitable tension.

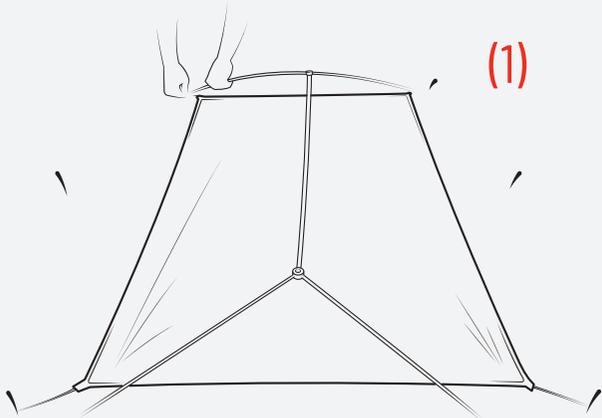

3. Assemble all of the poles and insert the pole tips into the four corner eyelets on both the inner and groundsheet. The poles should bend upwards when pitching the last two sections to create the tent shape. [Fig 1]
4. Using the pole clips, attach the inner canopy to the poles. [Fig 2]
5. Unpack the flysheet and place over the top of the inner canopy. Use the velcro tabs to ensure a secure fit in windy conditions. Insert the pole ends into the flysheet corner eyelets.

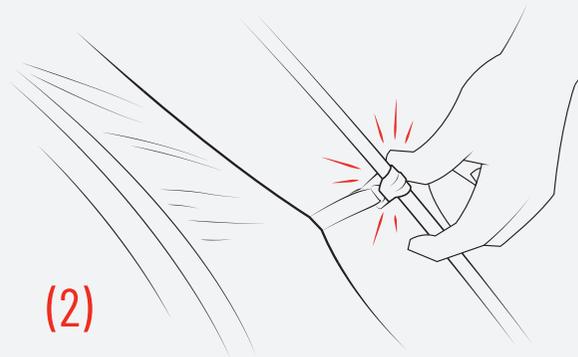


If this product does not meet your expectations upon delivery or does not live up to the demands placed upon it, please return it within 3 years of purchase for repair, replacement or refund. If the problem is our fault then we will do this to your satisfaction, if it's your fault we will help the best we can!

Email: support@alpkit.com


Phone: +44(0) 1773 417007

Website: alpkit.com/support

- Tension the flysheet by adjusting the webbing lock at the peg out points. For extra security loop the excess webbing through the top hook to prevent slipping in windy conditions. [Fig 3]
- Peg out the tent, starting from the back two corners moving forwards to the porch.

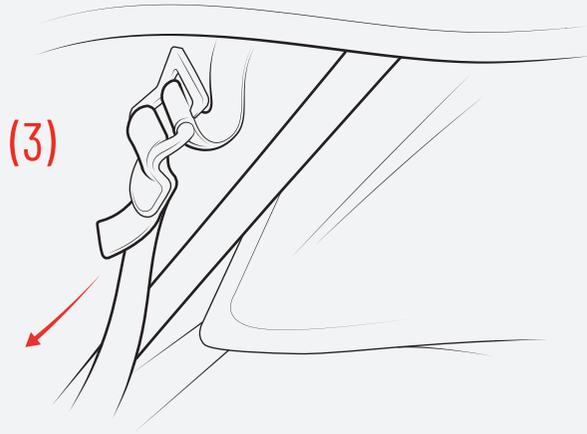


- Adjust the guy lines to create space between the inner and flysheet for greater ventilation and reduce condensation build up. [Fig 4]

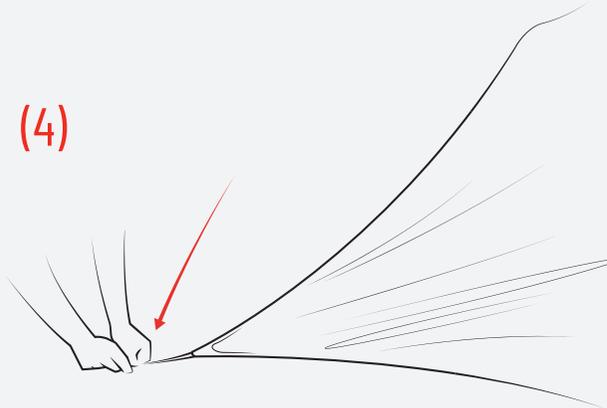

**HAPPY
CAMPING!**

PITCHING 'TARP STYLE'

- First, peg out the footprint. Ensure the ground is free from sharp objects and rocks. In windy conditions it is best to pitch Soloist inline with the wind.
- Assemble all of the poles and insert pole tips into the four corner eyelets on the groundsheet. The poles should bend upwards when pitching the last two sections to create the tent shape.
- With the tent structure in place, unpack the flysheet and place over the top of the poles. Use the Velcro tabs to ensure a secure fit in windy conditions. Insert the pole ends into the flysheet corner eyelets and peg the tent out.

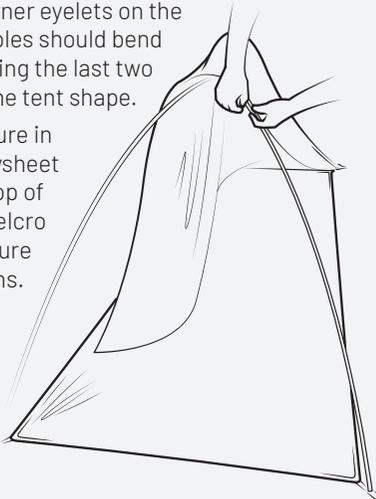

SPECIFICATION

Sleeps: 1
 Outer: 20d Silicone coated ripstop Polyester with PU backer (HH: 3,000mm)
 Inner mesh: 20d Nylon Breathable ripstop
 Floor: 20d ripstop Polyester PU (HH: 5,000mm)
 Poles: 7001-T6 alloy
 Pegs: 11 pegs, Alpkit Apex

CARE AND MAINTENANCE

- Clean and dry tent thoroughly after each use.
- Never use a washing machine or tumble dryer to clean your tent. Car washes are also frowned upon.
- Spot clean with mild detergent and warm water.
- Air dry only.
- Pack tent carefully to avoid punctures.
- Avoid prolonged UV exposure.

CONTINUE THE JOURNEY

When your partnership with this product is over please don't leave it hidden in a cupboard, never to see another adventure. Wash it, pass it on, give to a friend, sell it, donate it to charity, make it into something else or recycle it and let someone else live their dream.



**REPAIR STATION
HACK, PATCH & SEW**

In store service for your kit: alpkit.com/stores



CONTINUUM PROJECT

For more ideas on how you can extend the life of or donate your outdoor products visit: alpkit.com/continuum